


LOCK CYLINDER INSTALLATION FOR KT-700 SERIES KEY TRAP USING CORBIN/RUSSWIN INTERCHANGEABLE CORE CYLINDERS.

Thread Corbin / Russwin removable core housings into the key trap as shown in the picture. Due to the length of the cylinders use the provided cylinder spacers.

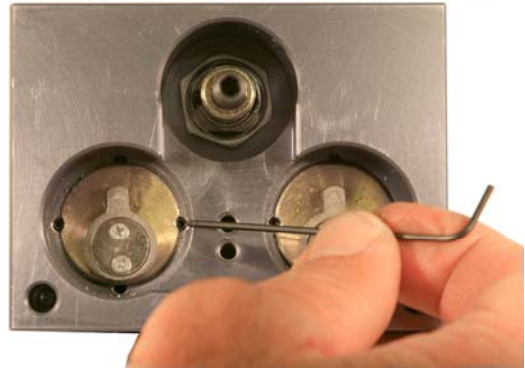

Secure cylinders with two 6-32 set screws. It may be necessary to run a tap down the side of the cylinder prior to installing the the second set screw.

With the cylinders secured in the Key Trap with cylinder set screws, remove the cams from the back of the cylinders.

It's a good idea to do this step with the interchangeable cores installed in the cylinder housing.



Major
MANUFACTURING, INC.

1825 Via Burton, Anaheim, CA, 92806

714-772-5202 / Fax 714-772-2302 / Email / mail@majormfg.com / web www.majormfg.com

The timing link used is shown at the right. Install one side to one of the mortise cylinders. Put a key into the opposite cylinder and turn until you can line up the cam on the cylinder and secure with the cam screws. The key trap is now ready to use.



Screw installed at factory to prevent cylinder from traveling over center. Do not remove.

Completed installation of the Corbin/Ruswin Interchangeable core cylinders. Link will allow only one key to be removed at a time. Returning one key will allow removal of the other.

Major
MANUFACTURING, INC.

1825 Via Burton, Anaheim, CA, 92806

714-772-5202 / Fax 714-772-2302 / Email / mail@majormfg.com / web www.majormfg.com