



1825 VIA BURTON
ANAHEIM CA 92806
714-772-5202 / FAX 714-772-2302
EMAIL: MAIL@MAJORMFG.COM
WEB: WWW.MAJORMFG.COM

**INSTRUCTIONS
FOR
HIT-66-251 TEMPLATE
FOR
KABA
760/770/790/79M**

**WHEN USING POWER TOOLS
ALWAYS WEAR
EYE AND EAR PROTECTION!!**

THINK SAFETY!!

**WHEN USING POWER TOOLS
ALWAYS WEAR
EYE PROTECTION!!**

Before attempting any installation know how to safely use the power tools involved. Be sure all bits and cutters are sharp and in good condition and all power tools and extension cords are in good working order and properly grounded. **AND MOST IMPORTANTLY, BE SURE TO WEAR, EYE AND EAR PROTECTION.**

Copyright 2010—Major Manufacturing

Drill Bit Types



All hole saws are not created equal. A cheap hole saw from a home improvement center or one that has been dropped can be out of round and will not fit the drill bushings in our templates.



Shown above is a standard twist drill bit. They can be used on both wood or steel doors. Be sure to back out the bit when drilling to clear chips.




Shown above and at right is a brad point bit. They will produce a very clean hole in a wood door. Use at a low speed and back the bit out to clear chips. Do not use on a steel door.



Shown above is a tri-flute drill bit. Do not attempt to use this in a drill guide. The lack of bearing surface will cause the bit to jam.



Shown above is a spade or paddle type bit. Do not attempt to use this in any drill guide. There is no bearing surface and you will jam the bit.

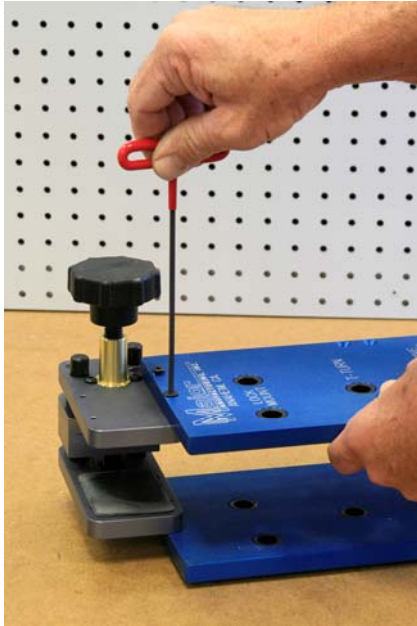

NOTE: The HIT-66 clamps shown are not part of the HIT-66-251 template set and must be purchased as a separate item.

With both clamps opened equally, install both inside and outside templates to the HIT-66 clamp as shown. Do not tighten the 10-32 screws at this time. When all screws have been loosely installed, then it is ok to tighten.



Install the alignment guide to either side of the template set. This is used to align the template with the mortise pocket.




Shown is a standard mortise pocket, we will use this as a basis for the KABA install.



Install the mortise lock positioning plate. The plate will fit into the 1-1/4" x 8" faceplate cut out. There will be a 3/8" diameter pin centered on the plate. There is no top or bottom to worry about.



Slide the HIT-66 template with the alignment guide alignment pin and tighten to door. Alternate tightening between the top and bottom clamp. Do not attempt to tighten one clamp all the way at once.

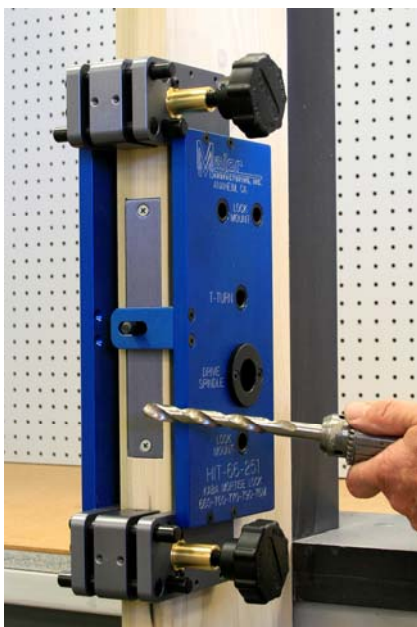


For drilling wood or metal doors, use a standard twist drill as shown.



Drill the four 1/2" diameter holes on the drill guide. The two top holes and the bottom hole are lock mounting holes for thru-bolt mounting. The center 1/2" hole is for the t-turn. Drill half way from both sides of the door.



The center 1" diameter guide bushing is for the drive spindle. A hole saw shown at left can be used on both wood or steel doors, drill half way to the mortise pocket from both sides of door.

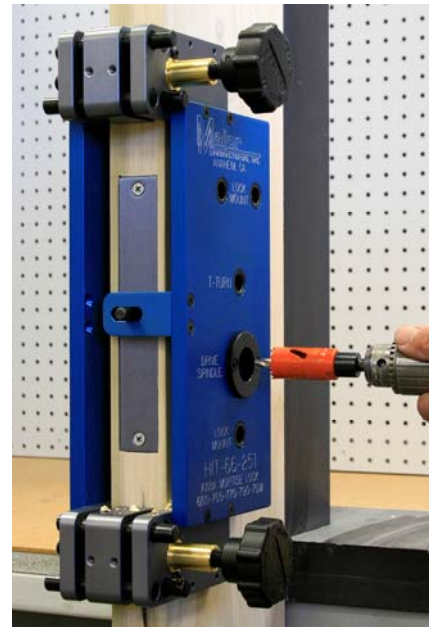

When all holes have been drilled remove the
The HIT-66 drill guide from the door.



**Completed lock prep.
Install lock per manufacturers directions.**

That's all there is to it!

Visit our web site at www.majormfg.com for more information on lock templates and a complete listing of all the tools we have available. While there, sign up for our newsletter and we will email new product information directly to you.