




1825 VIA BURTON
ANAHEIM, CA 92806
714-772-5202 / FAX 714-772-2302

DIRECTIONS FOR JP-22 JAMB PIN

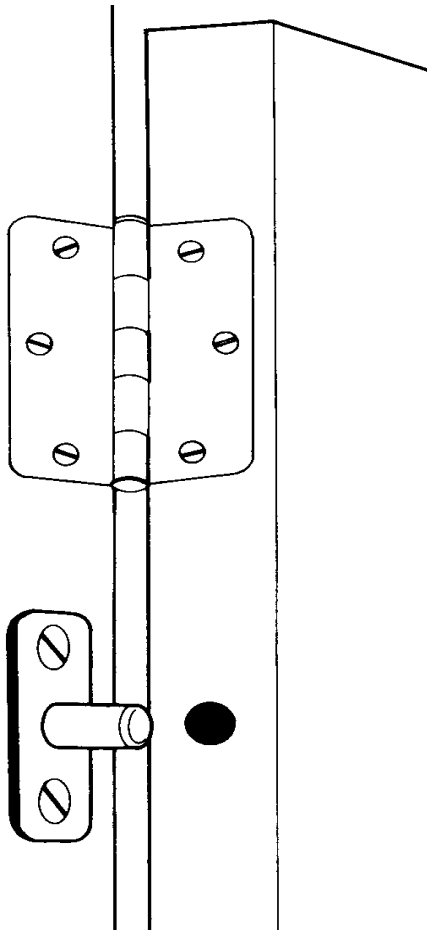

INSTRUCTIONS

1. Install JP-22 4" below top hinge and 4" above bottom hinge. (Top hinge shown in diagram)
2. Drill a 1/4" hole in center of door frame to receive the 1/4" locating pin.
3. Mortise mounting plate into jamb if necessary and secure with mounting screws.
4. Close door slowly and mark pin location on door. Drill a 1/2" hole.